 


HOW TO MASTER RESET 7.8AT-CLEAR LUBE BELT MESSAGE

 
1. Press and hold the highest incline (level 15) and speed (level 12) keys on the console keypad to enter the engineering menu.
2. Toggle into ENG3 (switch function) and press ENTER.
3. Hold highest Incline 15 and Speed 12 until ENG8 appears.



4. Follow the instructions for your console:
 - Press Enter to change "Normal" to "No Clear"

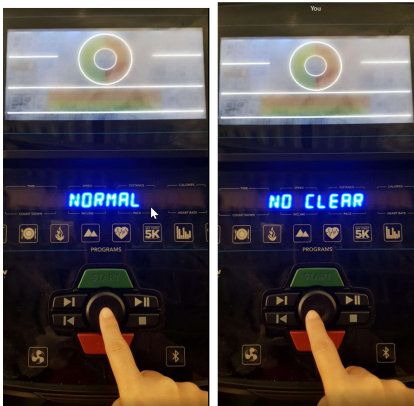

- Press START button for couple seconds in order to change "No Clear" to "Clear"

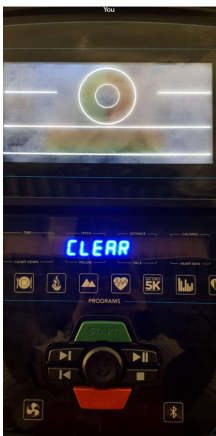

- Press Enter to change “Clear” to “Press Start to ERP”.



5. Hold START for about 5 seconds. This will start the master reset (10s duration then the console will be power off) and all data will be cleared.
6. Exit by holding STOP, or by removing the safety key.