

Treadmill Troubleshooting

>> Safety Key | Reed Switch

Symptom	Possible Cause	Test Procedure	Repair
Console only displays dashes or 'Safety Key Off' in the display window – Magnet style key.	Safety key is positioned incorrectly or has failed.	-Remove safety key and reapply. -Test magnet.	Replace safety key.
	Failed reed switch or failed upper control board.	-Short the switch connector on the upper board by using a flat blade screwdriver or by placing a jumper switch on the connector.	If the upper board still displays dashes then replace upper board. Otherwise replace reedswitch.
Safety key will only register if moved outside of the proper position.	Improperly aligned reedswitch.	Remove glue from reedswitch and reposition.	Test for proper function and glue into place.